

11. Setting the operating timer

Important! The date and time must be set correctly!

System is in Production or Ready.

- Press the down arrow -- the date and time will appear.
- Press the ESC key.
- Select Logo Settings and press the ENTER key.
- Select Program and press the ENTER key.
- Select Set Parameter and press the ENTER key.
- Then press the down arrow key until parameter B103 appears.
- Select B103 with the ENTER key.

MTWTFSS (Monday, Tuesday, ...) has a black background.

- Press the ENTER key to select -- use the arrow keys to adjust.
Arrow up/down: If the letter appears, the day is active, if there is a minus then it is inactive.
Arrow left/right: select next/previous day.
- Press Enter to exit the line.
- Press the down arrow key and ENTER key to set the switch-on time using the arrow keys.
- Press the ENTER key to exit the line.
- Press the down arrow key and ENTER key to set the switch-off time using the arrow keys.
- Press the ENTER key to exit the line.

etc.

- Then press ESC repeatedly until you have completely exited - date/time - then press the up arrow key to display the operating status again.

To activate the timer, enter the service menu.

- To do this, press the F1, F2 and F3 keys simultaneously - the service menu appears on the display
- Press and hold the ESC key until a black bar appears
- Then press the ENTER key – 00000000 appears on the black bar
- Enter 000111 using the arrow keys
- Then press the ENTER key and then press ESC
- You can scroll forwards with the F2 key and backwards with the F1 key!
- Scroll forward 4 pages until a page appears with Timer OFF at the top
- Use the arrow keys to go to the Timer OFF line and hold down ESC until OFF is highlighted in black
- Then press the ENTER key
- Now press the down arrow key until ON is displayed instead of OFF
- Then confirm with the ENTER key
- Press ESC
- Exit with F4 (or pull out the mains plug)

Finished

The system runs only for the set time!