

17. Changing the operating hours

This setting is adjusted in the inner base module.

- Press the ESC key - then use the arrow keys to select the "Program" menu item
- Confirm with OK
- Then select "Set Parameter"
- OK - Now select the "BetrStdz" (Operating Hours) option (B007)
- Confirm with OK
- At the top of the first display (MI), enter the new hours using the arrow keys. (factory setting is 4500 hours)
- Confirm with OK

Press the F4 key to see an overview of whether the change was successful.