


21.3 System is in Production and motor is not running

Check/replace fuses on the circuit board

Check/replace capacitor

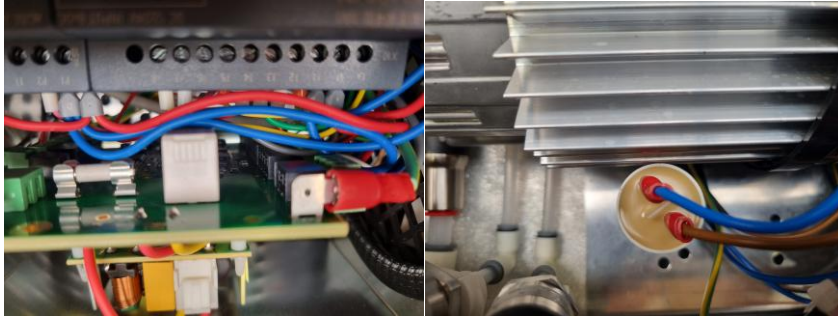

Check that the motor is receiving 230 volts at the plug – if not, the circuit board is defective!