


KORROSTOP[®]

Check/change settings (E.KO IONISER[®] 1501 or 1502/1503)

1.

Use the arrow keys (1) to switch to the „Configuration“ screen (2).
Login - Please log in (3).


Either with the factory user, user: „korro“ and password: „stop“ or your personal access data.
Click OK.

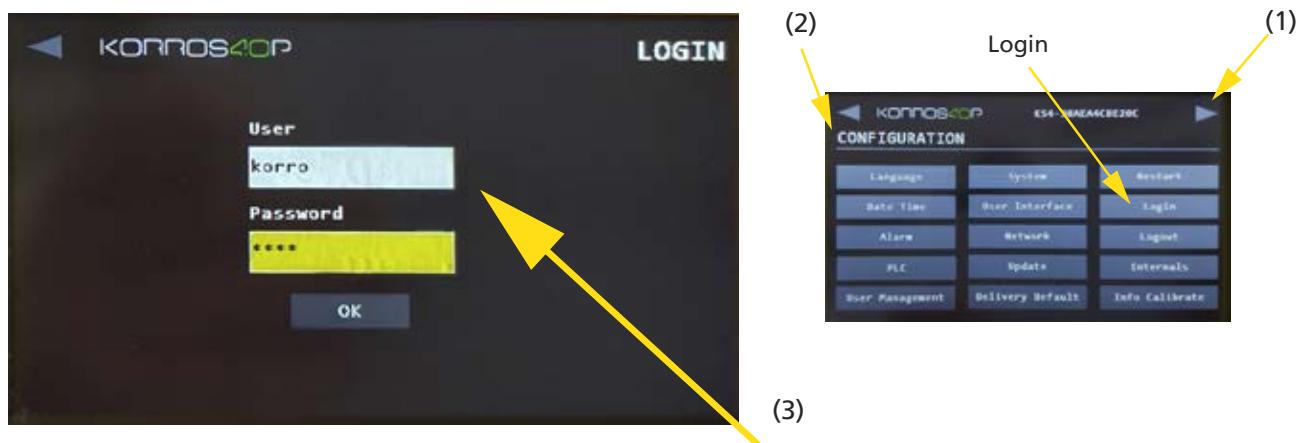

2.

From the configuration screen, select „System“. Check on the right side (4) which E.KO IONISER[®] system (1501 or 1502) is selected and choose your desired E.KO IONISER[®] system.
The settings for 1502 and 1503 are identical.

(5)

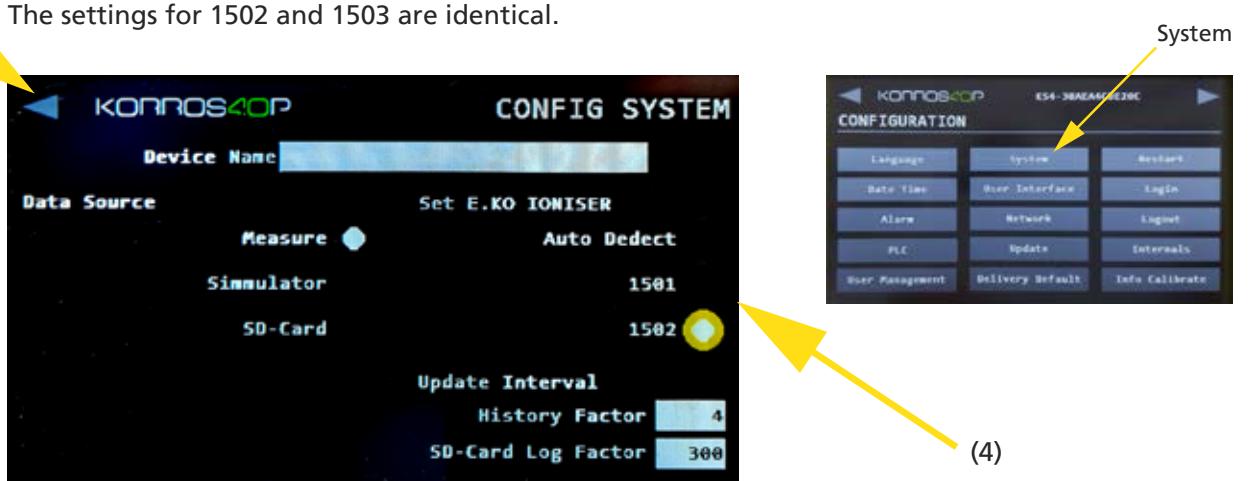

Exit the configuration using the arrow at the top left (5) and save the changes.

The KORROSTOP4.0[®] must now be restarted.

Download KORROSTOP4.0[®] documents

The entire manual for the KORROSTOP4.0[®] and further information
For the points listed here, see the following links:

<https://github.com/easymetal>

Korrostop4.0[®] Manual:

<https://github.com/easymetal/Korrostop4.0-EN/wiki>

About the system screen:

<https://github.com/easymetal/Korrostop4.0-EN/wiki/Manual-Configuration-system>

Information and update files: <https://github.com/easymetal/Korrostop4.0-EN>