

WHEELY

TROLLEY FOR THE E.KO IONISER®



Frame made from aluminium profiles
Plastic handle
Industrial transport rollers (2 x steerable, with brakes)


Dimensions (D/W/H): 668/390/191 mm
Weight: 9 kg





HANDLING REMOVING THE E.KO IONISER® FROM THE PALLET

- 1.) Pull approx. 1/3 to 1/2 of the E.KO IONISER® of the pallet.
- 2.) Place the trolley under the E.KO IONISER® and lever with your foot.
- 3.) Now pull the E.KO IONISER® onto the trolley and it's READY TO GO.

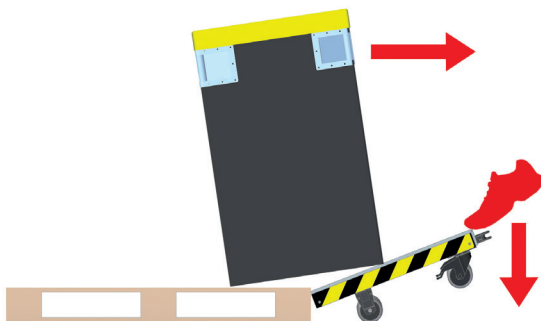

E.KO IONISER® ON THE PALLET

- 1.) Simply pull the E.KO IONISER® onto the pallet from the trolley and it's READY TO GO.

